

IC3645LXCD1MA

This logic card replaces all of the following logic cards:

IC3645EVM1 or IC3645EVM6. Standard current limit with auto plug IC3645EVM2 or IC3645EVM7. High current limit with auto plug IC3645EVM3 or IC3645EVM8. Standard current limit without auto plug IC3645EVM4 or IC3645EVM9. High current limit without auto plug

Please read carefully. This replacement logic card has the same functions and features as the logic card that it replaces with two major differences:

1. The IC3645LXCD1MA card *can only be* adjusted using the EV100 Handset (There are no adjustment potentiometers).



2. Function 17 must be adjusted per the following table:

| If the logic card that you are replacing is: | Set Function 17 between: |
|--|---------------------------|
| IC3645EVM1 or IC3645EVM6 | 10 and 14 |
| IC3645EVM2 or IC3645EVM7 | 15 and 19 |
| IC3645EVM3 or IC3645EVM8 | 0 and 4 (Factory Setting) |
| IC3645EVM4 or IC3645EVM9 | 5 and 9 |

The IC3645LXCD1MA card will have the following settings from the factory. **Setting changes for your** particular application may need to be made at the time of installation. **Refer to the EV100 LX Dual Motor Function Description Guide for function and value ranges.** The Guide should be included with each LX handset.

| Description | Function | Setting | Nominal Value |
|--------------------|----------|---------|---|
| Creep | 2 | 52 | 6.5% On-Time |
| C/A | 3 | 15 | 1.3 Sec |
| C/L | 4 | 140 | 250 Battery Amps @ 50% On-Time |
| Plug Current | 5 | 125 | 570 Motor Amps |
| PA4 Input Switch | 7 | 75 | Setting of 0-127 For Normally Open steer switch. Setting 128 or |
| Function Selection | , | | greater Normally Closed switch. |
| S/L 1 | 11 | 255 * | 0% S/L when the TURN Switch is Closed |
| S/L 2 | 12 | 255 * | 0% S/L when the INSIDE wheel is reversed |
| Battery Volts | 15 | 48 | Card is tested @ 48 volts, (Check your truck voltage) |
| Pedal Plug | 16 | 32 | 200 Motor Amps |
| Card Type | 17 | 2 | Standard current limit without auto plug |
| SP Delay Dropout | 18 | 174 | D.O. 24 sec after Direction Switch opens |

^{*} These two functions will need to be adjusted to a number between 0 = 100% and 180 to 255 = 0% of battery to the inside wheel motor to set the required speed for proper turning operations.

Rev: 05 Date: 12/11/13